

# LIGO PRODUCT, INC.

## ASSEMBLY INSTRUCTIONS

BROADWAY COUNTER HEIGHT CHAIR  
CHR-011-28 *LU-0128*

Please read instructions carefully. Remove all wrapping material, staples and packing straps from the carton. See Hardware and Furniture Parts List for guidance. Be sure you have all parts before you start assembling. Place all wooden furniture parts on a clean flat soft surface, such as carpet or rug to prevent from being scratched.

**CAUTION:**









(1) DO NOT FULLY-TIGHTEN THE NUTS OR SCREW INITIALLY UNTIL ALL THE NUTS OR SCREWS ARE ALREADY ASSEMBLED. (TO AVOID CAUSING DAMAGES TO THE THREAD, DO NOT OVER-TIGHTEN THE NUTS OR SCREW).

(2) KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN

**PARTS LIST**

NO	DESCRIPTIONS	QTY
1	CHAIR BACK	1
2	SEAT FRAME	1
3	FRONT LEG	2
4	SIDE STRETCHER L/R	2
5	FRONT STRETCHER	1

**HARDWARE LIST**



A.	B.	C.	D.	E.	F.	G.	H.
HEX. NUT	LONG BOLT	SHORT BOLT	FLAT WASHER	SPRING WASHER	CSK SCREW	ALLEN KEY	SPANNER
							
4 PCS	4 PCS	3 PCS	11 PCS	11 PCS	6 PCS	1 PC	1 PC

**STEP 1:**

Turn Chair Back (1) upside down.  
Insert Short Bolt (C), Spring Washer (E), & Flat Washer (D) into the holes at the Rear bar of Seat Frame (2) and Long Bolt (B) Spring Washer (E), & Flat Washer (D) into the holes at the Rear Corner by using Allen Key (G).  
Do not fully tighten the Bolts at this stage.

**STEP 2:**

Place the Front Legs (3) into Seat frame (2).  
Attach Hex Nut (A) together with Spring washer (E), Flat washer (D).  
Insert the Front stretcher (5) into Front legs holes.  
Insert the Side stretcher (4) into Chair back frame (1) & Front legs (3) holes.  
Secure all Stretchers with CSK Screws (F), by using Phillips-Head Screwdriver (Not Provided).  
Fully tighten all Bolts with Allen Key (G) and Hex Nuts (A) with Spanner (H) after leveling the chair.

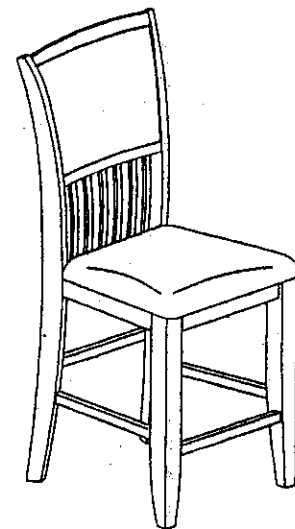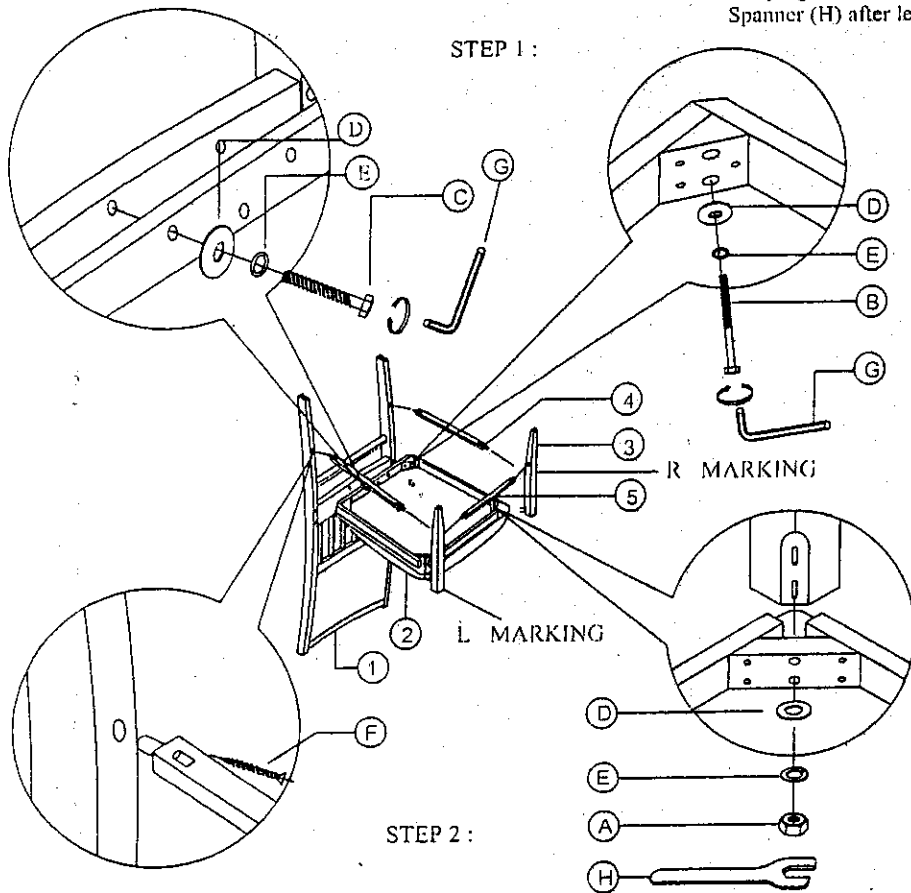

MADE IN VIETNAM